FACE MASK Pattern and Instructions

Created by: Chelsey Byrd Lewallen

University of Idaho

Apparel, Textiles and Design Program

Materials Needed:

Interlock Knit Fabric
Thread

General Instructions:

1. Begin and end all seams with a backstitch

2. Clip threads after each seam

3. Use **1/4**" seam allowance unless otherwise indicated






University of Idaho

Margaret Ritchie School of Family and Consumer Sciences

INSTRUCTIONS:



1. Wash and dry fabric on the hottest settings to preshrink and sanitize the fabric. Sanitize workspace. Press fabric on the fold.






2. Mark and cut 2 pattern pieces on the fold for one mask.

Cut 1" wide tie to length designated on the pattern for the size you have selected.


3. With right sides together, sew mask pieces on the curved edges using a serger OR with a small zig-zag stitch. (1W, 2 L)

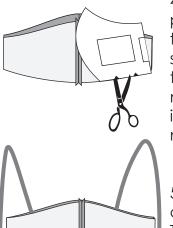

4. Stack two layers of mask pattern with right sides together with center front seams matching. Use pattern to mark or clip 1/8" notches for bottom opening. Do not clip notches more than 1/8".

5. Place the tie as shown to create an M in the mask. Tie the loose ends to the middle of the tie and tuck them inside for sewing.


6. Pin in the ditch at the center front tops and center front bottoms. Pin at the sides to avoid stitching over the ties.



7. Sew around the mask leaving the notched opening and tie channels unstitched.



8. Turn the mask right side out. Untie the knots that were attached to the center of the tie and then tie double or triple knots at the bottom of the two raw ends.

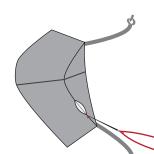




9. Handstitch the opening shut using a hand needle and thread and a slip stitch. Or leave the opening for filter inserts.

10. Be sure to wash and dry your mask before each use and stay healthy!

FACE MASK Pattern

Created by: Chelsey Byrd Lewallen

University of Idaho Apparel, Textiles and Design Program

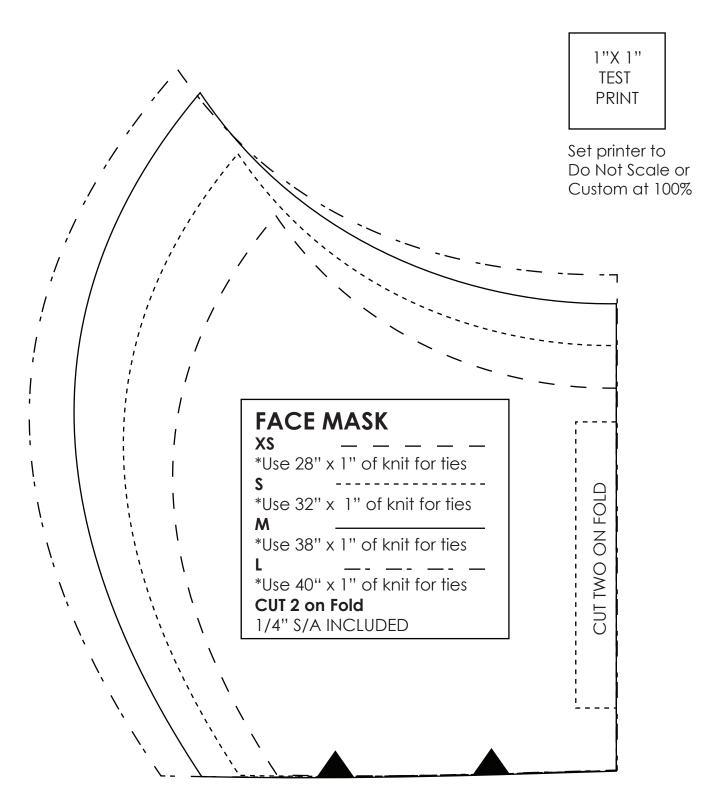



Margaret Ritchie School of Family and Consumer Sciences